

Experimental Toolkit Procedure - Thermal Insulation and Cooling Rates for Spacecraft Thermal Protection

GENERAL INFORMATION

Author	Timon Karl-Heinz Schwarz
Version number	1
Last edited on	24-July-2026

SHORT EXPERIMENT DESCRIPTION

This classroom experiment compares how four passive insulation configurations slow the cooling of an identical heated thermal core: a bare control, bubble wrap, a reflective Mylar layer, and a full multilayer insulation (MLI) package made from cotton, bubble wrap, and Mylar. Students collect one temperature reading per minute for 15 minutes, compare the measured curves with Newtonian cooling predictions, and connect conduction, convection, and radiation to spacecraft thermal-control design.

Recommended class format: four groups working in parallel. Expected duration: approximately 55–70 minutes, including setup, a 15-minute measurement run, and post-processing.

LEARNING OBJECTIVES

- Distinguish conduction, convection, and thermal radiation in a practical system.
- Explain why trapped air and layered insulation can reduce heat transfer.
- Collect a controlled time series and compare observed and predicted cooling curves.
- Evaluate why material choice alone is insufficient when gaps, compression, or inconsistent probe placement introduce experimental error.

HARDWARE CHECKLIST

From the school / students:

Qty.	Item	Purpose / requirement
1	Heat-safe bucket or deep container	Used as a water bath and secondary containment.
1	Kettle or other supervised hot-water source	Teacher/adult use only.
2+	Digital probe thermometers	One for the thermal core; one to verify the water bath.
1	Timer or stopwatch	Must display one-minute intervals.
1	Heat-resistant gloves or tongs	Required for handling the heated core.
—	Towels and a stable dry surface	Keep water away from electronic equipment.

Included in the toolkit / prepared for each group:

Qty.	Item	Purpose / requirement
4 / 1	Identical thermal core / metal capsule with probe access	Use the same water mass, container, and probe depth for every condition.
1 set	Cotton or soft fibrous wrap	Inner conductive barrier for the full MLI package.
1 roll	Bubble wrap	Convective/conductive shield; do not crush the bubbles.
1 sheet	Reflective Mylar or emergency blanket	Radiation shield and outer layer of the full MLI package.
—	Tape and elastic bands	Secure layers without compressing them.
1 each	Worksheet / lab report	Hypothesis, raw data, calculations, and evaluation.

SAFETY AND CONTROL REQUIREMENTS

HOT-WATER HAZARD. Water near 80 °C can cause serious scalds. An adult must prepare the bath and handle the heated core with gloves or tongs. Keep the bucket below waist height on a stable surface. Never use boiling water, never point a sealed hot container toward a person, and never immerse electrical displays, connectors, or power supplies.

- Use only heat-safe, undamaged containers. Do not test pressurized or completely sealed containers unless they are designed for hot liquids.
- Keep all electronics and cables dry; only the intended metal probe may contact the water.
- Use identical starting temperature, water mass, probe depth, ambient location, and measurement interval for fair comparison.
- Stop the test if a probe slips, insulation becomes wet, a container leaks, or the starting temperature is outside the agreed tolerance.

TEST CONFIGURATIONS

Configuration	Construction	Main heat-transfer control	Expected behavior
Bare core (control)	No insulation; identical probe depth and container.	Reference for natural convection and radiation.	Fast cooling.
Bubble wrap only	Two uniform layers; close the neck without crushing the bubbles.	Trapped air reduces conduction and convection.	Moderate heat retention.
Mylar only	One reflective layer with the shiny face outward; secure the neck.	Reduces radiation only; air leaks can dominate.	Highly sensitive to gaps.
Full MLI	Cotton inner layer + bubble wrap + reflective Mylar outer layer.	Combines conduction, convection, and radiation control.	Best heat retention when tightly sealed.

Optional extension. A cotton-only configuration may be added as a fifth trial. The supplied teaching model lists cotton as an intermediate solution, while the attached physical telemetry focuses on bare, bubble, Mylar-only, and full MLI configurations.

Fair-test rule. When starting temperatures differ, do not rank insulation by final temperature alone. Compare temperature drop, normalized heat retained above ambient, or a fitted value of k .

ILLUSTRATED SETUP

Prepare and verify the hot-water station



Figure 1. Water-bath temperature is checked with a separate probe before conditioning the thermal core.



Figure 2. Bare thermal core in the bath. Keep the probe centered and at a repeatable depth.

BUILD THE INSULATION PACKAGES

Bubble-wrap configuration

Wrap the core with two even layers of bubble wrap. Close the neck around the probe, but do not crush the air pockets. Use the same overlap and tape position throughout the trial.



Figure 3. Bubble-wrap-only capsule with the probe secured at the neck.

Mylar-only configuration

Apply one complete reflective layer with the shiny surface outward. Seal the neck carefully. A loose opening allows warm air to escape and can overwhelm the benefit of the radiation shield.



Figure 4. Mylar-only capsule. The reflective layer is visible around the full body.

FULL MULTILAYER INSULATION (MLI)

Build the full package from the core outward: a uniform cotton layer, two layers of bubble wrap, and a reflective Mylar outer layer. Secure each layer independently so that the outer band does not compress the insulation. Close the neck around the probe to limit convective leakage.

1. Place cotton evenly around the dry core; avoid thick folds.
2. Add bubble wrap with consistent overlap and intact air cells.
3. Finish with Mylar, shiny side outward, and close the neck.
4. Check that the probe tip remains at the same central depth used for the other configurations.



Figure 5. Multilayer test package during measurement; the reflective layer and sealed probe opening are visible.

Model coefficients supplied with the teaching tool

2. PEDAGOGICAL SOLUTIONS & COOLING RATES			
Here are the expected Newtonian decay coefficients (approximate values depending on insulation tight wrapping):			
• Bare Core: $k = 0.082$ (Drops to $\sim 23^{\circ}\text{C}$)	• Cotton Wrap: $k = 0.045$ (Drops to $\sim 40^{\circ}\text{C}$)	• Bubble Wrap: $k = 0.032$ (Drops to $\sim 49^{\circ}\text{C}$)	• Multi-Layer MLI: $k = 0.015$ (Stays at $\sim 64^{\circ}\text{C}$)

Figure 6. Approximate Newtonian cooling coefficients used by the teaching model.

Interpret with care. The coefficient panel is a model reference, not a guaranteed result. Actual cooling depends on ambient temperature, core size, water mass, probe position, compression, drafts, and the quality of the neck seal.

PROCEDURE

Complete the following steps for each insulation condition. Groups may work in parallel if all groups have identical equipment and the same ambient environment.

Step	Action	Notes	Duration	Check
1	Prepare a stable, dry work area.	Keep the hot-water station separate from laptops, power banks, and cables.	2 min.	
2	Measure the ambient temperature.	Record room temperature once before the first trial and again if the room changes noticeably.	1 min.	
3	Label the four test conditions.	Bare, Bubble, Mylar, and Full MLI. Use identical cores or reuse the same core after returning it to the same starting condition.	2 min.	
4	Build each insulation package.	Keep material area, probe position, and neck closure consistent. Do not compress the bubble or cotton layers.	8 min.	
5	Prepare the hot-water bath.	Teacher/adult only: target approximately 80 °C. Confirm with a separate bath thermometer.	5 min.	
6	Condition the thermal core.	Heat the core until its central probe reading is stable and within 80 ± 2 °C.	3–5 min.	
7	Transfer the core to the dry test station.	Use gloves or tongs. Wipe external water away. Keep the probe at the same depth for every condition.	< 30 s	
8	Start the timer and record T_0 .	Start timing immediately after transfer. If T_0 is outside the agreed tolerance, recondition and repeat.	A few seconds	
9	Record temperature every minute.	Take 16 readings from 0 through 15 min. Do not touch, move, unwrap, or shade the sample during the run.	15 min.	
10	Repeat for all four conditions.	Use the same room position, container, water mass, timing interval, and measurement method.	As needed	
11	Enter observations in the telemetry sheet.	Calculate temperature drop, retained temperature, model variance, and—if used—the correlation score.	5 min.	
12	Cool, dry, and store the equipment.	Do not remove insulation until the core is safe to handle. Empty water only at a sink.	5 min.	

DATA RECORDING AND CALCULATION

Record temperature at 0, 1, 2, ..., 15 minutes. Do not substitute readings taken at irregular times without recording the actual timestamps.

Temperature drop: $\Delta T_{\text{drop}} = T_0 - T_{15}$

Newtonian cooling model: $T(t) = T_{\text{amb}} + (T_0 - T_{\text{amb}})e^{(-kt)}$

Estimated cooling coefficient: $k = -\ln[(T_t - T_{\text{amb}})/(T_0 - T_{\text{amb}})] / t$

Use temperatures in degrees Celsius and time in minutes, so k is reported in min^{-1} . The logarithm expression is valid only while T_t remains above T_{amb} .

REFERENCE OBSERVATIONS FROM THE ATTACHED TEST

The following values were transcribed from the supplied 16-point telemetry screenshots. They are included as a worked example and should not replace student measurements.

Condition	T ₀ (°C)	T ₁₅ (°C)	Drop (°C)	Heat retained*	Dashboard score	Grade
Full MLI	77.6	62.7	14.9	74.1	93%	A
Bubble wrap	82.6	52.6	30.0	52.1	83%	B
Bare control	80.1	35.2	44.9	25.3	94%	A
Mylar only	80.5	33.3	47.2	22.0	3%	F

*Heat retained is calculated relative to a 20 °C ambient reference: $(T_{15}-20)/(T_0-20) \times 100$. Values are rounded.

Complete observed temperature series

Time (min)	Full MLI (°C)	Bubble (°C)	Mylar (°C)	Bare (°C)
0	77.6	82.6	80.5	80.1
1	76.6	79.0	68.6	73.9
2	76.1	75.2	61.8	66.0
3	75.6	72.5	55.8	59.9
4	75.1	70.0	51.3	54.5
5	74.5	67.9	47.8	50.1
6	73.9	65.6	44.9	47.1
7	73.5	64.0	42.5	44.6
8	72.1	62.3	40.6	42.5
9	70.6	60.6	38.9	40.9
10	69.7	58.9	38.1	39.5
11	68.5	57.5	36.3	38.2
12	67.4	56.1	35.5	37.3
13	65.8	54.8	34.6	36.5
14	64.1	53.7	33.9	35.8
15	62.7	52.6	33.3	35.2

Worked-example interpretation. Full MLI retained the most heat (62.7 °C at 15 min), followed by bubble wrap (52.6 °C). The bare and Mylar-only samples reached 35.2 °C and 33.3 °C. The unusually weak Mylar-only result and 3% dashboard correlation indicate a construction or control issue—such as convective leakage—not a universal failure of reflective insulation.

PREDICTION-OBSERVATION GRAPHS



Figure 7. Full MLI: 93% dashboard correlation and high stability.



Figure 8. Bubble wrap: 83% dashboard correlation and moderate isolation.

PREDICTION-OBSERVATION GRAPHS (CONTINUED)



Figure 9. Mylar-only layer: 3% dashboard correlation; the panel flags convective leakage.

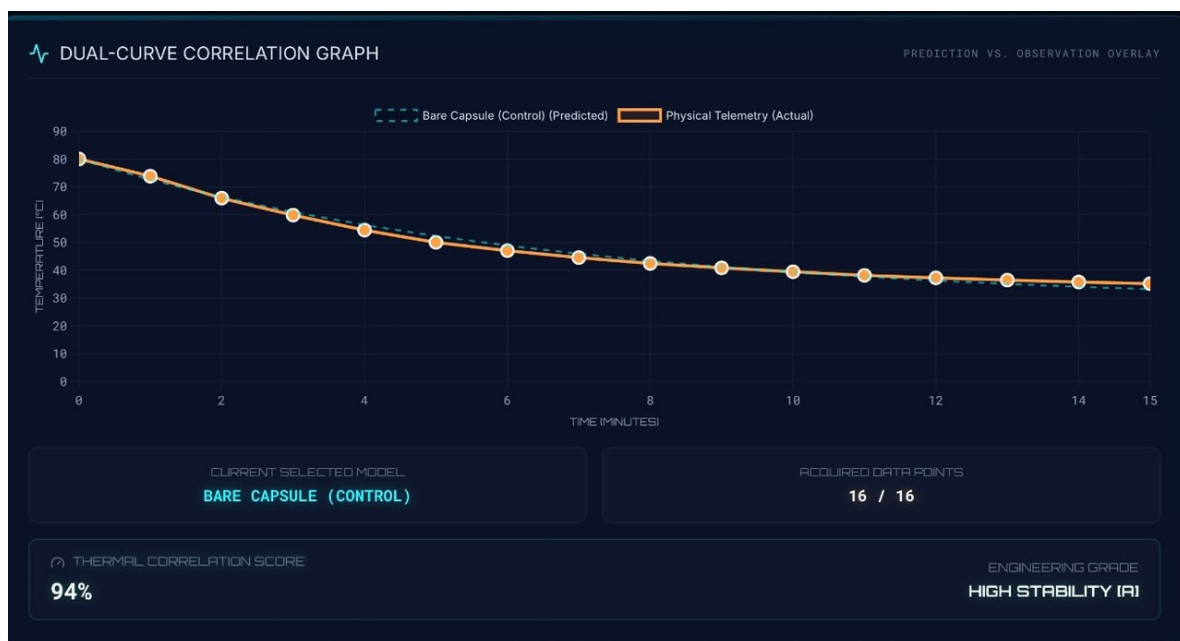


Figure 10. Bare control: 94% dashboard correlation and high stability of the fitted model.

EXPERIMENT POST-PROCESSING

Student analysis

1. Plot all four measured curves on the same axes using identical scales.
2. Calculate ΔT_{drop} and estimate k for each configuration.
3. Rank the configurations using a normalized measure that accounts for different starting temperatures.
4. Identify at least two possible sources of uncertainty and explain the direction in which each could change the result.
5. Compare the physical outcome with the model, then explain any disagreement using heat-transfer mechanisms rather than simply calling it an error.

Class discussion prompts

- Why can a reflective layer work well in vacuum but perform poorly in air when warm air can escape?
- Why should bubble wrap and cotton not be tightly compressed?
- Which variables must be controlled before comparing two cooling coefficients?
- How is spacecraft multilayer insulation similar to—and different from—the classroom package?

Acceptance checklist

Check	Completion criterion
	All four conditions used the same core, water mass, probe depth, and recording interval.
	Every trial includes 16 time–temperature pairs from 0 through 15 minutes.
	Ambient temperature and starting-temperature tolerance are documented.
	Graphs have units, labels, a legend, and an equal time axis.
	Conclusions distinguish material performance from build quality and experimental uncertainty.
	All hot equipment has cooled, been dried, and been stored safely.

Teacher note. This experiment demonstrates comparative thermal behavior under classroom conditions. It does not certify any material for aerospace, pressure-vessel, fire-protection, or personal-protective use.